



Tel: 08715 089 820
Fax: 08715 227 030
Email: sales@click4spares.co.uk
Web: www.click4spares.co.uk

Description

Part No

HP LaserJet 1000/1005/1150

Fuser assembly (HP LaserJet 1000/1005/1200/3300 series)
 Fuser assembly (HP LaserJet 1150/1300 series)
 Fuser film (HP LaserJet 1000/1010/1012/1015/1200/1300/3200/3300)
 Transfer roller (HP LaserJet 1000/1005/1200 series)
 Transfer roller (HP LaserJet 1150/1300 series)
 Paper feed tyre (HP LaserJet 1000/1005/1200)
 Paper pickup roller (HP LaserJet 1150/1300)
 Paper separation pad (HP LaserJet 1000/1005/1200/1300)
 Paper pickup roller shaft (HP LaserJet 1000/1005/1200)
 Paper pickup shaft assembly (HP LaserJet 1150/1300)
 Paper pickup assembly (HP LaserJet 1000)
 Paper pickup assembly (HP LaserJet 1005/1200)
 Paper pickup assembly (HP LaserJet 1150/1300)
 Paper lifting plate (HP LaserJet 1000/1005)
 Paper lifting plate (HP LaserJet 1150/1300)
 Output delivery roller assembly (HP LaserJet 1000/1005/1200)
 Clutch for paper pickup roller (HP LaserJet 1000/1005/1200)
 Paper tray excludes clear cover (HP LaserJet 1000/1005/1200)
 Paper tray cover with guides (HP LaserJet 1000/1005/1200)
 Paper tray excludes clear cover (HP LaserJet 1150/1300)
 Paper tray cover with guides (HP LaserJet 1150/1300)
 Laser scanner assembly (HP LaserJet 1000)
 Laser scanner assembly (HP LaserJet 1005/1200)
 Laser scanner assembly (HP LaserJet 1150/1300)

RG9-1494-040 (fuser)
 RM1-0716-000 (fuser)
 FILM-1200 (film)
 RG9-1483-000 (transfer roller)
 RM1-0550-000 (transfer roller)
 RF0-1008-000 (roller)
 RL1-0303-000 (roller)
 RF0-1014-000 (pad)
 RG0-1007-000 (paper path)
 RM1-0533-000 (paper path)
 RG0-1085-000 (paper path)
 RG0-1003-000 (paper path)
 RG0-0531-000 (paper path)
 RG0-1006-000 (paper path)
 RG0-0528-000 (paper path)
 RG0-1010-000 (paper path)
 RY7-5081-000 (clutch)
 RG0-1013-000 (tray)
 RG0-1014-000 (cover)
 RM1-0553-000 (tray)
 RM1-0554-000 (cover)
 RG9-1498-000 (scanner)
 RG9-1486-000 (scanner)
 RM1-0524-000 (scanner)

HP LaserJet 1010/1012/1015

Fuser assembly (HP LaserJet 1010 / 1012 / 1015)
 Fuser film (HP LaserJet 1000/1010/1012/1015/1200/1300/3200/3300)
 Paper pickup roller
 Paper separation pad assembly
 Transfer roller assembly

RM1-0661-000 (fuser)
 FILM-1200 (film)
 RL1-0266-000 (roller)
 RM1-0648-000 (pad)
 RM1-0658-000 (transfer roller)

HP LaserJet 1160/1320

Fuser assembly (HP LaserJet 1160 / 1320)
 Paper feed repair kit (HP LaserJet 1160/1320)
 Paper separation pad (Tray 2)
 Paper pickup roller assembly
 Transfer roller assembly
 (£ email) Laser scanner assembly (HP LaserJet 1160/1320 series)

RM1-1461-000 (fuser)
 FKITLJ1320 (feed repair kit)
 RM1-1298-000 (pad)
 RL1-0540-000 (paper path)
 RM1-1471-000 (transfer roller)
 RM1-1470-000 (scanner)

HP LaserJet 1100 series

Paper feed repair kit (HP LaserJet 1100)
 Fuser heater assembly with brown film (HP LaserJet 1100 series)
 Fuser film (HP LaserJet 1100/5P/6P)
 Lower fuser roller (orange rubber roller)
 Fuser exit idle wheel (white)
 Fuser exit idle wheel spring
 Transfer roller
 Paper feed tyre
 Face down output roller
 Face up output roller
 Separation roller (2x black rollers on shaft)
 Paper separation pad
 Sub separation pad (left)
 Sub separation pad (right)

FKITLJ1100 (feed repair kit)
 RG5-4590-000 (fuser spare)
 FILM-5P (film)
 RF5-2823-000 (fuser spare)
 RB2-4222-000 (fuser spare)
 RB1-7287-000 (spring)
 RG5-4657-000 (transfer roller)
 RB2-4026-000 (roller)
 RF5-2830-000 (roller)
 RF5-2822-000 (roller)
 RB2-3912-000 (roller)
 RF5-2886-000 (pad)
 RF5-2820-000 (pad)
 RF5-2821-000 (pad)

Description

Part No

Paper output assembly	RG5-4593-030 (paper path)
Feed tyre shaft (holds paper feed tyre)	RB2-3930-000 (paper path)
Gear assembly (clutch, paper feed)	RG5-4585-020 (paper path)
Kick arm (applies pressure to paper stack when feeding)	RG5-4582-000 (paper path)
Feed roller assembly	RG5-4581-000 (paper path)
Rear paper support (transparent green paper support)	RG9-1332-000 (paper path)
Front paper support (transparent green paper support)	RG9-1329-000 (paper path)
Laser scanner assembly	RG5-4570-000 (scanner)
HP LaserJet 1200/1300 series	
Paper feed repair kit (HP LaserJet 1200/3300 series)	FKITLJ1200 (feed repair kit)
Fuser assembly (HP LaserJet 1000/1005/1200/3300 series)	RG9-1494-040 (fuser)
Fuser assembly (HP LaserJet 1150/1300 series)	RM1-0716-000 (fuser)
Fuser film (HP LaserJet 1000/1010/1012/1015/1200/1300/3200/3300)	FILM-1200 (film)
Transfer roller (HP LaserJet 1000/1005/1200 series)	RG9-1483-000 (transfer roller)
Transfer roller (HP LaserJet 1150/1300 series)	RM1-0550-000 (transfer roller)
Paper feed tyre (HP LaserJet 1000/1005/1200)	RF0-1008-000 (roller)
Paper pickup roller (HP LaserJet 1150/1300)	RL1-0303-000 (roller)
Paper separation pad (HP LaserJet 1000/1005/1200/1300)	RF0-1014-000 (pad)
Paper pickup roller shaft (HP LaserJet 1000/1005/1200)	RG0-1007-000 (paper path)
Paper pickup shaft assembly (HP LaserJet 1150/1300)	RM1-0533-000 (paper path)
Paper pickup assembly (HP LaserJet 1005/1200)	RG0-1003-000 (paper path)
Paper pickup assembly (HP LaserJet 1150/1300)	RG0-0531-000 (paper path)
Paper lifting plate (HP LaserJet 1150/1300)	RG0-0528-000 (paper path)
Output delivery roller assembly (HP LaserJet 1000/1005/1200)	RG0-1010-000 (paper path)
Clutch for paper pickup roller (HP LaserJet 1000/1005/1200)	RY7-5081-000 (clutch)
Paper tray excludes clear cover (HP LaserJet 1000/1005/1200)	RG0-1013-000 (tray)
Paper tray excludes clear cover (HP LaserJet 1150/1300)	RM1-0553-000 (tray)
Paper tray cover with guides (HP LaserJet 1000/1005/1200)	RG0-1014-000 (cover)
Paper tray cover with guides (HP LaserJet 1150/1300)	RM1-0554-000 (cover)
Laser scanner assembly (HP LaserJet 1005/1200)	RG9-1486-000 (scanner)
Laser scanner assembly (HP LaserJet 1150/1300)	RM1-0524-000 (scanner)
HP LaserJet 2100/2200 series	
Maintenance kit (HP LaserJet 2100/2100M)	MKIT2100 (maintenance kit)
Maintenance kit (HP LaserJet 2200D/2200DTN)	MKIT2200 (maintenance kit)
Paper feed repair kit (HP LaserJet 2100/2200 series) - single paper tray models	FKITLJ2100 (feed repair kit)
Paper feed repair kit (HP LaserJet 2100/2200 series) - dual paper tray models	FKITLJ2100T (feed repair kit)
Fuser assembly (HP LaserJet 2100 series)	RG5-4133-000 (fuser)
Fuser assembly (HP LaserJet 2200 series)	RG5-5569-000 (fuser)
Fuser film (HP LaserJet 2100/4000/4050)	FILM-4000 (film)
Fuser film (HP LaserJet 2200/2500/4200 series)	FILM-2200 (film)
Lower fuser roller (HP LaserJet 2100 series)	RF5-2601-000 (fuser spare)
Lower fuser roller (HP LaserJet 2200 series)	RB2-6369-000 (fuser spare)
Transfer roller (HP LaserJet 2100)	RG5-4164-000 (transfer roller)
Transfer roller (HP LaserJet 2200)	RG5-5581-000 (transfer roller)
Paper pick up roller (tray 1)	RB2-2900-000 (roller)
Paper pick up roller (tray 2) main cassette feed tyre	RB2-2891-000 (roller)
Delivery rollers (lower) 4x used LJ2100/2200	RB2-2849-000 (roller)
Exit roller (HP LaserJet 2100)	RF5-2604-000 (roller)
Paper separation pad (tray 1)	RB2-6348-000 (pad)
Paper separation pad (tray 2)	RB9-0695-000 (pad)
Paper separation pad (on metal plate) 500 sheet cassette (HP LaserJet 2200)	RB2-3007-000 (pad)
Paper separation pad (on cassette arm) 500 sheet cassette (HP LaserJet 2200)	RB2-6474-000 (pad)
Delivery roller assembly LJ2100 (4x used)	RG5-4119-000 (paper path)
Face down delivery assembly LJ2200	RG5-5542-000 (paper path)
MP Tray pickup roller assembly LJ2100/2200	RG5-4128-000 (paper path)
Tray 2 pickup assembly LJ2100	RG5-4127-000 (paper path)
(£ email) Drive assembly (gear assembly on right hand side)	RG5-4131-000 (paper path)
(£ email) Drive assembly, tray 3	RG5-4391-000 (paper path)
(£ email) Delivery guide assembly	RG5-4141-000 (paper path)

Description**Part No**

250 Sheet paper tray, tray 2/3	R98-1003-000 (tray)
MP Tray assembly LJ2100	RG5-4126-000 (tray)
MP Tray assembly LJ2200	RG5-5576-000 (tray)
Right DIMM cover (with buttons) LJ2100	RG5-4123-000 (cover)
Right DIMM cover (with buttons) LJ2200	RG5-5545-000 (cover)
Cover MP tray LJ2100/2200	C7058-67902 (tray)
Paper drive gear (Tray 2) LJ2100/2200	RG5-4156-000 (gear)
MP tray paper drive gear (white nylon gear) LJ2100/2200	RB2-3040-000 (gear)
Transport belt kit LJ2100	RY7-5053-000 (belt)
Paper feed belt (smallest)	RB2-6270-000 (belt)
Paper feed belt (wide middle belt)	RB2-6272-000 (belt)
Paper feed belt (long narrow rear belt)	RB2-6273-000 (belt)
Registration assembly LJ2200	RG5-5556-000 (mechanical)
Laser scanner assembly LJ2100	RG5-4172-000 (scanner)
Laser scanner assembly LJ2200	RG5-5591-000 (scanner)
Power Supply PCA LJ2100	RG5-4150-000 (psu)
Power Supply PCB 230V LJ220	RG5-5573-000 (psu)
Formatter PCB LJ2100	C4132-60001 (pcb)
Formatter PCB LJ2200	C4209-61002 (pcb)
HP LaserJet 2300 series	
Maintenance kit (HP LaserJet 2300)	MKIT2300 (maintenance kit)
Paper feed repair kit (HP LaserJet 2300 series) - single paper tray models	FKITLJ2300 (feed repair kit)
(£ email) Paper feed repair kit (HP LaserJet 2300 series) - twin paper tray models	FKITLJ2300T (feed repair kit)
Fuser assembly (HP LaserJet 2300 series)	RM1-0355-000 (fuser)
Fusing roller assembly	RM1-0357-000 (fuser spare)
Fuser Film only (LJ2300)	FILM-2200 (film)
Paper feed guide roller	RB2-2892-000 (roller)
Paper feed roller for sheet feeder	RB2-3484-000 (roller)
Top output bin roller	RB2-6277-000 (roller)
Paper pickup roller (tray 2 and tray 3)	RB2-6304-000 (roller)
Paper feed roller (tray 2)	RG5-5555-000 (roller)
Paper feed roller	RC1-0920-000 (roller)
MP/Tray 1 pickup roller	RC1-0945-000 (roller)
Face down output roller	RM1-0371-000 (roller)
Paper separation pad	RB2-3007-000 (pad)
Paper separation pad (tray 1)	RC1-0939-000 (pad)
Paper separation pad assembly	RB2-9960-000 (paper path)
Paper feed roller assembly	RG5-4394-000 (paper path)
Paper pickup assembly	RM1-0332-000 (paper path)
Paper sensor lever (senses paper at pickup roller)	RB2-6310-000 (paper path)
Paper sensor arm (flag for registration photo sensor)	RB3-0905-000 (paper path)
Printer drive assembly	RM1-0334-000 (mechanical)
Laser scanner assembly 2300	RM1-0313-000 (scanner)
Formatter PCB	Q1395-60002 (pcb)
Engine controller assembly (inc. back plate)	RM1-0339-000 (pcb)
Control panel assembly	RH6-0226-000 (pcb)
Cooling fan (mounted on left side of printer)	RH7-1591-000 (fan)
DC motor	RH7-1587-000 (motor)
Power supply PCA	RG1-4329-000 (PSU)
HP LaserJet 2400 series	
Fuser assembly (HP LaserJet 2400 series)	RM1-1537-000 (fuser)
MP Tray paper pickup tyre	RL1-0568-000 (roller)
Cassette paper pickup roller	RL1-0542-000 (roller)
Paper separation pad (tray 2/3)	RC1-0939-000 (pad)
Transfer roller	RM1-1508-000 (transfer roller)
HP LaserJet 3015 series	
Fuser assembly (HP LaserJet 3015/3020/3030 series)	RM1-0866-000 (fuser)
Paper pickup assembly	RM1-0864-000 (paper path)
Paper pickup roller (D-shaped)	RL1-0266-000 (roller)
Paper separation pad assembly	RM1-0648-000 (pad)

Description

Part No

Transfer roller	RM1-0658-000 (transfer roller)
HP LaserJet 3300 series	
Paper feed repair kit (HP LaserJet 1200/3300 series)	FKITLJ1200 (feed repair kit)
Fuser assembly (HP LaserJet 1000/1005/1200/3300 series)	RG9-1494-000 (fuser)
Fuser film (HP LaserJet 1000/1010/1012/1015/1200/1300/3200/3300)	FILM-1200 (film)
Separation pad (HP LaserJet 3300 only)	RF0-1014-000 (pad)
ADF separation pad assembly	C7039-60009 (pad)
ADF pickup roller assembly	C7039-60049 (roller)
Paper feed roller assembly	RG0-1005-000 (paper path)
Paper pickup roller	RL1-0303-000 (roller)
Output roller assembly	RG0-1010-000 (paper path)
Face up output roller	RF0-1003-000 (roller)
Transfer roller	RG9-1483-000 (transfer roller)
Laser scanner assembly	RG9-1486-000 (scanner)
HP LaserJet 4/4+/5 series	
Maintenance kit (HP LaserJet 4/4M)	MKIT4 (maintenance kit)
Maintenance kit (HP LaserJet 4+/4M+)	MKIT4PLUS (maintenance kit)
Maintenance kit (HP LaserJet 5/5M/5N)	MKIT5 (maintenance kit)
Paper feed repair kit (HP LaserJet 4/4M/4+/4M+)	FKITLJ4 (feed repair kit)
Paper feed repair kit (HP LaserJet 5/5M/5N)	FKITLJ5 (feed repair kit)
Fuser assembly (HP LaserJet 4/4M series)	RG5-0455-000 (fuser)
Fuser assembly (HP LaserJet 4+/4M+/5/5M/5N series)	RG5-0880-000 (fuser)
Upper fuser roller (HP LaserJet 4+/4M+/5/5M/5N series)	RB1-3516-000 (fuser spare)
Lower fuser roller (HP LaserJet 4+/4M+/5/5M/5N series)	RB1-3517-000 (fuser spare)
Fuser heat lamp (220V)	RH7-4049-000 (fuser spare)
Transfer roller	RF5-0349-000 (transfer roller)
Paper pickup roller - cassette tyre (HP LaserJet 4/4M)	RB1-2126-000 (roller)
Paper pickup roller - cassette tyre (HP LaserJet 4+/4M+/5/5M/5N)	RB1-3477-000 (roller)
Paper pickup roller - cassette tyre (HP LaserJet 5/5M/5N)	RB1-7911-000 (roller)
Paper pickup tyre (multi-purpose tray)	RB1-2127-000 (roller)
Upper delivery roller (HP LaserJet 4/4+/5 series)	RF9-1326-000 (roller)
Lower delivery roller (HP LaserJet 4/4+/5 series)	RF5-1077-030 (roller)
Optional base cassette pickup tyre (HP LaserJet 4)	RB1-2632-000 (roller)
Optional base cassette pickup tyre (HP LaserJet 4+/4M+)	RB1-2650-000 (roller)
Optional base cassette pickup tyre (HP LaserJet 5/5M/5N)	RB1-7983-000 (roller)
Paper separation pad (multi-purpose tray)	RF5-0343-000 (pad)
(£ email) Paper pickup assembly unit (HP LaserJet 4)	RG5-0451-000 (paper path)
(£ email) Paper pickup assembly unit (HP LaserJet 4+/4M+)	RG5-0877-000 (paper path)
Paper pickup assembly unit (HP LaserJet 5/5M/5N)	RG5-2195-000 (paper path)
Output delivery roller assembly, LJ4/4+/4M+	RG5-0886-000 (paper path)
Output delivery roller assembly, LJ5/5M/5N	RG5-1425-030 (paper path)
Drive gear assembly, LaserJet 4	RG5-0457-000 (mechanical)
Drive gear assembly, LaserJet 4+/4M+/5/5M/5N	RG5-0876-060 (mechanical)
Laser assembly (HP LaserJet 4)	RG5-0449-000 (scanner)
Laser assembly (HP LaserJet 4+/4M+/5/5M/5N)	RG5-0903-000 (scanner)
Top fan (HP LaserJet 4+/4M+)	RH7-1177-000 (fan)
Top fan (HP LaserJet 5/5M/5N)	RH7-1178-000 (fan)
HP LaserJet 4000/4050 series	
Maintenance kit (HP LaserJet 4000/4000N/4050/4050N) - single paper tray models	MKIT4000 (maintenance kit)
Paper feed repair kit (HP LaserJet 4000/4050 series) - single paper tray models	FKITLJ4000 (feed repair kit)
Paper feed repair kit (HP LaserJet 4000/4050 series) - dual paper tray models	FKITLJ4000T (feed repair kit)
Fuser assembly (HP LaserJet 4000/4050 series)	RG5-2662-000 (fuser)
Fuser heater assembly (220V)	RG5-4291-100 (fuser spare)
Fuser film (HP LaserJet 2100/4000/4050)	FILM-4000 (film)
Lower fuser roller	RB9-0684-000 (fuser spare)
Transfer roller	RG5-4283-000 (transfer roller)
Paper feed / separation tyre (tray 2, 3 and 4 - grey with blue core)	RF5-1885-000 (roller)
Paper pickup tyre (tray 2, 3 and 4 - half moon, 4x off required)	RB1-8865-000 (roller)
Paper pickup tyre (multi-purpose tray)	RG5-3718-000 (roller)

Description**Part No**

Spring (attached to paper feed shaft)	RS5-2632-000 (spring)
Paper pickup tyre assembly (4x half moon tyres on shaft)	RF5-2484-000 (paper path)
Paper separation assembly (multi-purpose tray)	RG5-5281-000 (paper path)
Torque limiter	RB1-8974-000 (clutch)
Coupler (paper feed shaft drive coupler)	RB1-8877-000 (paper path)
Tray 1 pickup assembly (mp tray)	RG5-2655-000 (paper path)
Registration Assembly	RG5-2652-000 (paper path)
Delivery Assembly	RG5-2648-000 (paper path)
MP tray (paper support tray with adjustable guides)	RG5-2656-000 (paper path)
MP tray paper sensor lever arm	RB1-8787-000 (paper path)
MP tray solenoid	RH7-5172-000 (paper path)
Sensor lever cover (holds tray 1 paper detection switch)	RB1-8788-020 (paper path)
Paper sensing arm (tray 2)	RB1-8879-000 (paper path)
Paper sensing arm (tray 3)	RB1-8910-000 (paper path)
Paper exit arm and flag assembly	RG5-2650-000 (paper path)
Drive assembly	RG5-2653-000 (paper path)
Laser scanner assembly LaserJet 4000/4050	RG5-2641-000 (scanner)
Formatter PCB	C4118-67908 (PCB)
Engine controller PCB	RG5-3694-040 (PCB)
Cooling fan	RH7-1334-000 (fan)
Motor	RH7-1331-000 (motor)
Main motor	RG5-3729-000 (motor)
HP LaserJet 4100 series	
Maintenance kit (HP LaserJet 4100/4100N/4100TN/4100DTN)	MKIT4100 (maintenance kit)
Paper feed repair kit (HP LaserJet 4100/4100N - single paper tray models)	FKITLJ4100 (feed repair kit)
Paper feed repair kit (HP LaserJet 4100T/4100TN - dual paper tray models)	FKITLJ4100T (feed repair kit)
Fuser assembly (HP LaserJet 4100 series)	RG5-5064-000 (fuser)
Fuser film (HP LaserJet 4100 series)	FILM-4100 (film)
Lower fuser roller	RB2-4937-000 (fuser spare)
Transfer roller	RG5-5295-000 (transfer roller)
Paper feed / separation tyre (tray 2, 3 and 4 - grey with blue core)	RF5-3114-000 (roller)
Paper pickup tyre (tray 2, 3 and 4 - half moon, 4x off required)	RB1-8957-000 (roller)
Paper pickup tyre (multi-purpose tray)	RG5-3718-000 (roller)
Spring (attached to paper feed shaft)	RS5-2632-000 (spring)
Coupler (paper feed shaft drive coupler)	RB1-8877-000 (coupler)
Paper separation assembly (multi-purpose tray)	RF5-3086-000 (paper path)
Paper pickup drive assembly T2 4100/N	RG5-5277-000 (paper path)
Lower paper pickup drive assembly T4 (optional tray) 4100 series	RG5-5293-000 (paper path)
Torque limiter	RB1-8974-000 (clutch)
Tray 1 pickup assembly (mp tray)	RG5-5084-000 (paper path)
Registration Assembly	RG5-5085-000 (paper path)
Delivery Assembly	RG5-5094-000 (paper path)
MP tray paper sensor lever arm	RB1-8787-000 (paper path)
Sensor lever cover (holds tray 1 paper detection switch)	RB1-8788-020 (paper path)
Paper sensing arm (tray 2/3/4)	RB1-8879-000 (paper path)
Paper exit arm and flag assembly	RG5-5093-000 (paper path)
MP tray (paper support tray with adjustable guides)	RG5-2656-000 (tray)
Print drive assembly	RG5-5087-000 (mechanical)
Laser scanner assembly LaserJet 4100	RG5-5100-000 (scanner)
Formatter PCB	C4169-67901 (pcb)
Control panel (HP LaserJet 4100)	RG5-5372-040 (pcb)
Engine Controller PCB	RG5-5360-003 (pcb)
Cooling fan	RH7-1442-000 (fan)
Main motor	RH7-1440-000 (motor)
HP LaserJet 4200/4300 series	
Maintenance kit (HP LaserJet 4200)	MKIT4200 (maintenance kit)
Maintenance kit (HP LaserJet 4300)	MKIT4300 (maintenance kit)
Maintenance kit (HP LaserJet 4250/4350)	MKIT4250 (maintenance kit)
Paper feed repair kit, LaserJet 4200/4300/4250/4350 series (single cassette models)	FKITLJ4200 (feed repair kit)

Description**Part No**

Paper feed repair kit, LaserJet 4200/4300/4250/4350 series (twin cassette models)	FKITLJ4200T (feed repair kit)
Fuser assembly (HP LaserJet 4200 series)	RM1-0014-000 (fuser)
Fuser assembly (HP LaserJet 4300 series)	RM1-0102-000 (fuser)
Fuser assembly (HP LaserJet 4250/4350 series)	RM1-1083-000 (fuser)
Fuser Film (HP LaserJet 4200 series)	FILM-4200 (film)
(£ email) Fuser Film (HP LaserJet 4300/4250/4350 series)	FILM-4300 (film)
Fuser cover/latch assembly (HP LaserJet 4200/4300 series)	CVR-4200-L (clip)
Fuser cover/latch assembly (HP LaserJet 4200/4300 series)	CVR-4200-R (clip)
Transfer roller assembly 4200/4300	RM1-0699-000 (transfer roller)
Transfer roller assembly 4250/4350	RM1-1110-000 (transfer roller)
Paper pickup roller (Tray 1) LJ4200/4300/4250/4350	RL1-0019-000 (roller)
Paper pickup roller (Tray 2 and 1500 sheet feeder assy.) LJ4200/4300/4250/4350	RM1-0036-000 (roller)
Paper feed/separation roller (Tray 2 and 1500 sheet feeder assy.) LJ4200/4300/4250/4350	RM1-0037-000 (roller)
Face down output roller 4200/4300	RM1-0371-000 (roller)
Paper separation pad (Tray 1) LJ4200/4300/4250/4350	RL1-0007-000 (pad)
Paper feed assembly clutch 4200/4300 (CL101)	RH7-5358-000 (clutch)
Front cover - Drop down tray 1 4200	RM1-0050-000 (tray)
Paper size sensor flag 4200/4300	RC1-0161-000 (sensor)
Paper sensor flag for tray 2 4200/4300	RC1-0209-000 (sensor)
Paper feed flag for tray 1 4200/4300	RC1-0060-000 (flag)
Torsion spring 4200/4300	RC1-0061-000 (spring)
Torsion spring for lifter drive assembly 4200/4300	RC1-0198-000 (spring)
Paper feed belt assembly 4200/4300	RM1-0025-000 (paper path)
Paper pickup assembly for tray 1 4200	RM1-0034-000 (paper path)
Torque limiter 4200/4300/4250/4350	RC1-0335-000 (paper path)
Paper pickup drive assembly 4200/4300	RM1-0056-000 (paper path)
Paper pickup drive assembly 4250/4350	RM1-1133-000 (paper path)
Registration roller assembly 4200/4300/4250/4350	RM1-0011-000 (paper path)
Paper feed roller assembly 4200/4300/4250/4350	RM1-0012-000 (paper path)
Paper delivery assembly 4200/4300	RM1-0026-000 (paper path)
Front cover stop arm 4200/4300	RC1-0714-000 (paper path)
Bushing - Right side of paper pickup drive assembly 4200/4300	RC1-0206-000 (paper path)
Paper pickup arm holder for roller shaft 4200/4300	RC1-0212-000 (paper path)
Paper pickup arm for tray 2 4200/4300	RC1-0211-000 (paper path)
Lifter driver assembly 4200/4300	RM1-0287-020 (paper path)
Paper level sensor gear assembly 4200/4300	RM1-0286-000 (paper path)
Tray lifter drive assembly	RM1-0208-000 (paper path)
Paper pickup assembly for 1500 sheet feeder (HP LaserJet 4200)	RM1-0283-000 (paper path)
Cooling fan (left side) 4200/4300	RH7-1573-000 (fan)
Cooling fan (right side) 4200/4300	RH7-1577-000 (fan)
Cooling fan (left side) 4250/4350	RK2-0278-000 (fan)
Cooling fan (right side) 4250/4350	RK2-0280-000 (fan)
Main motor 4200/4300	RH7-1570-000 (motor)
Main motor 4250/4350	RK2-0272-000 (motor)
Formatter board assembly 4200/4300	C6952-69002 (pcb)
Formatter board assembly 4250/4350	Q3653-69001 (pcb)
Power supply 220V (HP LaserJet 4200)	RM1-0020-000 (psu)
Power supply 220V (HP LaserJet 4300)	RM1-0108-000 (psu)
Power supply 220V (HP LaserJet 4250/4350)	RM1-1071-000 (psu)
Control panel assembly 4200/4300	RG1-4276-000 (pcb)
Main drive assembly 4200/4300	RM1-0001-000 (mechanical)
Main drive assembly 4250/4350	RM1-1066-000 (mechanical)
Laser scanner assembly 4200	RM1-0173-000 (scanner)
Laser scanner assembly 4300	RM1-0113-000 (scanner)
Laser scanner assembly 4250/4350	RM1-1067-000 (scanner)
DC controller board (HP LaserJet 4200)	RG1-4236-030 (pcb)
DC controller board (HP LaserJet 4300)	RG1-4237-030 (pcb)
DC controller board (HP LaserJet 4250/4350)	RM1-1108-000 (pcb)
HP LaserJet 4L/4P series	
Fuser assembly (HP LaserJet 4L / HP LaserJet 4P series)	RG5-0677-000 (fuser)

Description**Part No**

Fuser film	FILM-HP4L (film)
(£ email) Fuser lower pressure roller	RB1-3100-000 (fuser spare)
Transfer roller assembly	RF5-0596-000 (transfer roller)
Paper pickup tyre	RB1-3368-000 (roller)
Exit roller assembly (4x off rollers on shaft)	RG5-0683-000 (paper path)
Registration sensor arm/flag	RFS-0601-000 (flag)
Drive motor with nylon gear	RG5-0765-000 (motor)
(£ email) Laser scanner assembly	RG5-0662-000 (scanner)
HP LaserJet 4V series	
(£ email) Maintenance kit (HP LaserJet 4V)	MKIT4V (maintenance kit)
Paper feed repair kit (HP LaserJet 4V/4MV)	FKITLJ4MV (feed repair kit)
(£ email) Fuser assembly (HP LaserJet 4V series)	RG5-1558-000 (fuser)
Lower fuser roller (black rubber roller)	RB1-5472-000 (fuser spare)
Heat roller	RB1-5495-000 (fuser spare)
(£ email) Transfer roller assembly	RG5-1410-000 (transfer roller)
Paper pickup tyre (multi-purpose tray)	RB1-1411-000 (roller)
500 sheet cassette paper pickup roller	C3760-60506 (roller)
Paper separation pad (multi-purpose tray)	RF5-0320-000 (pad)
Paper pickup roller assembly inc. clutch (cassette)	RG5-1391-000 (paper path)
Face down delivery roller assembly	RG5-0198-000 (paper path)
MP front tray assembly	RG5-1562-000 (paper path)
(£ email) Laser motor PCB	C3141-69012 (PCB)
Front door assembly	RG5-1552-000 (mechanical)
Gearbox (exit roller drive)	RG5-1396-000 (mechanical)
HP LaserJet 5000 series	
Maintenance kit (HP LaserJet 5000)	MKIT5000 (maintenance kit)
Paper feed repair kit (HP LaserJet 5000)	FKITLJ5000 (feed repair kit)
Paper feed repair kit (HP LaserJet 5000TN)	FKITLJ5000T (feed repair kit)
Fuser assembly (HP LaserJet 5000 series)	RG5-5456-000 (fuser)
Fuser film (HP LaserJet 5000 series)	FILM-5000 (film)
Fuser heater assembly (heater and film)	RG5-5459-000 (fuser spare)
Lower fuser silicon roller	RB2-1919-000 (fuser spare)
Transfer roller	RG5-3579-000 (transfer roller)
Paper pickup roller (tray 2)	RB2-1821-000 (roller)
Paper pickup tyre (tray 1)	RB2-1820-000 (roller)
Paper separation roller, tray 3 (grey core) 2 used	RF5-2634-000 (roller)
Paper separation pad (tray 2)	RG9-1485-000 (pad)
Sub separation pad, MP tray	RF5-2399-000 (pad)
Separation pad (tray 1)	RF5-2400-000 (pad)
Torque limiter	RB1-8974-000 (clutch)
Delivery assembly	RG5-3542-000 (paper path)
(£ email) Delivery roller (upper, final delivery roller shaft)	RB2-1984-000 (paper path)
Laser scanner assembly	RG5-3603-000 (scanner)
Formatter PCB	C3974-67901 (pcb)
DC Controller	C4110-67905 (pcb)
Main motor	RH7-1357-000 (motor)
HP LaserJet 5100 series	
Maintenance kit (HP LaserJet 5100)	MKIT5100 (maintenance kit)
Paper feed repair kit (HP LaserJet 5000/5100)	FKITLJ5100 (feed repair kit)
Paper feed repair kit (HP LaserJet 5100/5100TN)	FKITLJ5100T (feed repair kit)
Fuser assembly (HP LaserJet 5100 series)	RG5-7061-080 (fuser)
Fuser film (HP LaserJet 5100 series)	FILM-5100 (film)
Transfer roller	RG9-1542-000 (transfer roller)
Paper pickup roller (tray 1)	RB2-1820-020 (roller)
Feed roller - 250 sheet feeder assembly feed roller	RB1-7499-000 (roller)
Paper separation roller, tray 3 (grey core) 2 used	RF5-2634-000 (roller)
Lower delivery roller	RB1-6251-000 (roller)
Paper pickup roller - 250 sheet tray - tray 2	RB2-1821-000 (roller)
Lower output delivery roller - shaft with four rollers	RB2-1985-000 (roller)

Description**Part No**

Roller - Upper roller of face-down roller guide - 4 used	RB2-1998-000 (roller)
Face down guide roller	RG9-1337-000 (roller)
Upper delivery roller - paper output	RG5-3542-090 (paper path)
Paper separation pad (tray 1)	RF9-4119-000 (pad)
Pad assembly	RF5-4117-000 (pad)
Tray 1 pickup roller gear	RB1-6130-000 (mechanical)
Tray 2 pickup roller shaft drive gear	RS5-0695-000 (mechanical)
Pickup roller assembly	RG5-3519-000 (paper path)
Tray 2 paper pickup roller assembly	RG5-3521-000 (paper path)
Pickup roller assembly for optional 250 sheet tray	RG5-3644-020 (paper path)
Registration roller assembly	RG5-4916-000 (paper path)
Paper feed roller assembly	RG5-7084-000 (paper path)
Paper feed clutch (tray 2)	RH7-5345-000 (clutch)
Paper feed roller clutch (tray 2)	RH7-5346-000 (clutch)
Torque limiter friction coupling	RB1-8974-000 (clutch)
Control panel (excludes overlay)	RG5-5438-030 (PCB)
Cooling fan (lower right rear)	RH7-1552-000 (fan)
Laser scanner assembly	RG5-7037-000 (scanner)
Main motor	RH7-1428-000 (motor)
Formatter PC board	Q1860-67901 (pcb)
DC controller PC board	RG5-7057-050 (pcb)
Power supply assembly	RH3-2249-000 (psu)
Paper handling PCA	RG5-7058-000 (pcb)
MP tray sensor lever	RB2-1781-000 (mechanical)
Lower tray paper sensor lever	RB2-1782-000 (mechanical)
Toner cartridge engagement arm	RB2-1856-000 (mechanical)
Tray 1 sensor arm	RB1-6134-000 (mechanical)
Large feed belt	RB2-1887-000 (belt)
Small paper feed belt	RB2-1888-000 (belt)
Paper feed belt assembly	RG5-4914-000 (mechanical)
Left side bushing for lower delivery roller	RB2-1989-000 (mechanical)
Tray 1 and tray 2 left side pickup roller shaft bushing	RS5-1392-000 (mechanical)
Main gear drive assembly (left side of printer)	RG5-7079-040 (mechanical)
Paper pickup drive assembly	RG9-1524-000 (paper path)
Paper sensor flag (250 sheet feeder)	RB1-7501-020 (flag)
Delivery roller shaft gear	RS6-0357-000 (gear)
Transfer guide assembly	RG5-3548-000 (mechanical)
Paper guide (tray 1)	RG5-3520-060 (paper path)
Rear door sensor assembly	RG5-3553-000 (mechanical)
Paper sensor (bin full sensor)	WG8-5375-000 (sensor)
Bin full lever (face down output tray sensor lever)	RB2-1980-000 (mechanical)
HP LaserJet 5L/6L/3100/3150 series	
Paper feed repair kit (HP LaserJet 5L/6L/3100/3150)	FKITLJ6L (feed repair kit)
Separation Pad Kit (HP LaserJet 3100/3150)	RY7-5077-000 (pad)
Fuser heater assembly (HP LaserJet 5L)	RG5-1965-000 (fuser spare)
Fuser heater assembly (HP LaserJet 6L)	RG5-3463-000 (fuser spare)
Fuser heater assembly (HP LaserJet 3100/3150)	RG5-4681-000 (fuser spare)
Fuser film (HP LaserJet 5L/6L/3100/3150)	FILM-5L (film)
Lower fuser roller (HP LaserJet 5L)	RF5-1516-000 (fuser spare)
Lower fuser roller (HP LaserJet 6L/3100/3150)	RF5-2364-000 (fuser spare)
Transfer roller	RF5-1534-000 (transfer roller)
Paper feed separation pad	RB2-6221-000 (pad)
Paper feed separation kit	RY7-5008-000 (pad)
Paper feed tyre assembly	RG5-1951-000 (paper path)
Feed tyre clutch (located on end of feed tyre shaft)	RB1-7197-000 (clutch)
Feed assembly, idler roller only	RB1-7226-000 (paper path)
Separation pad (ADF) HP LaserJet 3100/3150	HG5-1308-000 (pad)
Laser scanner assembly (HP LaserJet 5L)	C3941-69003 (scanner)
Laser scanner assembly (HP LaserJet 6L/3100/3150)	RG5-3497-000 (scanner)
HP LaserJet 5P/6P series	

Description**Part No**

Maintenance kit (HP LaserJet 6P/ 6MP)	MKIT6P (maintenance kit)
Paper feed repair kit (HP LaserJet 5P/5MP/6P/6MP)	FKITLJ6P (feed repair kit)
(£ email) Fuser assembly (HP LaserJet 5P/5MP series)	RG5-1701-000 (fuser)
Fuser assembly (HP LaserJet 6P/6MP series)	RG5-4111-000 (fuser)
Fuser film (5P/5MP/6P/6MP)	FILM-5P (film)
Lower fuser roller (HP LaserJet 5P/5MP)	RB1-5910-000 (fuser spare)
Lower fuser roller (HP LaserJet 6P/6MP)	RB1-9179-000 (fuser spare)
Fuser exit roller (HP LaserJet 6P/6MP)	RB1-9181-020CN (fuser spare)
Transfer roller (HP LaserJet 5P/5MP)	RF5-1287-000 (transfer roller)
Transfer roller (HP LaserJet 6P/6MP)	RG5-0596-000 (transfer roller)
Paper pickup tyre (main cassette)	RB1-6332-000 (roller)
Paper pickup tyre (multi-purpose tray)	RB1-2127-000 (roller)
Paper feed separation pad (multi-purpose tray)	RF5-0343-000 (pad)
Paper pickup tyre assembly (HP LaserJet 5P/5MP)	RG5-1692-000 (paper path)
Paper pickup tyre assembly (HP LaserJet 6P/6MP)	RG5-2796-000 (paper path)
Exit roller assembly (4x off rollers on shaft)	RG5-0683-000 (paper path)
Registration sensor arm/flag	RB1-6006-000 (flag)
(£ email) Laser scanner assembly (HP LaserJet 5P/5MP)	RG5-1780-000 (scanner)
(£ email) Laser scanner assembly (HP LaserJet 6P/6MP)	RG5-2848-000 (scanner)
HP LaserJet 5Si/8000/Mopier 240	
Maintenance kit (HP LaserJet 5Si / HP LaserJet 8000)	MKIT5SI (maintenance kit)
Paper feed repair kit (HP LaserJet 5Si/5SiMX/8000)	FKITLJ5SI (feed repair kit)
Fuser assembly (HP LaserJet 5Si / HP LaserJet 8000 series)	RG5-4448-050 (fuser)
Heat roller (HP LaserJet 5Si/8000/8050/Mopier 240)	RB1-6622-000 (fuser spare)
Lower fuser roller (HP LaserJet 5Si/8000)	RB1-6623-000 (fuser spare)
Heat roller bushing (grey bearing insert)	FB1-6823-000 (fuser spare)
(£ email) Heat lamp 220V 500W #1 (HP LaserJet 5Si/8000)	RH7-4074-000 (fuser spare)
(£ email) Heat lamp 220V 500W #2 (HP LaserJet 5Si/8000)	RH7-4075-000 (fuser spare)
Transfer roller	RF5-1412-000 (transfer roller)
Transfer roller assembly	RG5-1887-000 (mechanical)
Paper pickup roller (tray 2 and 3 - blue core)	RF5-1834-000 (roller)
Paper separation roller, tray 2 & tray 3 (black core)	RF5-1835-000 (roller)
MP tray pickup tyre (tray 1)	RB1-6730-000 (roller)
MP tray separation pad (tray 1)	RF5-1455-000 (pad)
Upper delivery roller shaft (final delivery rollers on shaft)	RB1-6686-000 (paper path)
Lower delivery roller (rubber rollers on shaft that feed up to delivery)	RB1-6667-000 (paper path)
Torque limiter	RB1-6588-000 (paper path)
Tray 2/3 registration roller tyre	RZ9-1022-030 (roller)
Tray 2/3 registration roller tyre assembly	RB1-6581-000 (paper path)
Tray 2/3 pickup assembly	RG5-1852-000 (paper path)
Laser scanner assembly	RG5-1895-000 (scanner)
DC controller PCA 5Si/8000	RG5-1844-000 (pcb)
HP LaserJet 8100/8150/Mopier 320	
Maintenance kit (HP LaserJet 8100 / HP LaserJet 8150)	MKIT8100 (maintenance kit)
Paper feed repair kit (HP LaserJet 8100, 8150)	FKITLJ8100 (feed repair kit)
Fuser assembly (HP LaserJet 8100/8150/Mopier 320)	RG5-6533-000 (fuser)
Heat roller (HP LaserJet 8100/8150/Mopier 320)	RB2-3521-000 (fuser spare)
Lower fuser roller (HP LaserJet 8100/8150)	RB2-3523-000 (fuser spare)
Transfer roller	RF9-1394-000 (transfer roller)
Paper pickup roller	RF5-2708-000 (roller)
Paper pickup roller (tray 2 and 3 - blue core)	RF5-1834-000 (roller)
Paper separation roller (tray 2 and 3 - black core)	RF5-1835-000 (roller)
MP tray pickup tyre	RB1-9526-000 (roller)
Duplex roller	RB1-6822-000 (roller)
MP tray separation pad	RF5-2703-000 (pad)
Tray 2/3 pickup assembly	RG5-4334-000 (paper path)
(£ email) Laser scanner assembly	RG5-4344-000 (scanner)
Formatter PCA 8100/8150	C4107-67901 (pcb)

Description**Part No**

Low Voltage PSU 8100/8150	RG5-4301-000 (psu)
HP LaserJet 9000 series	
Maintenance kit (HP LaserJet 9000)	MKIT9000 (maintenance kit)
Paper feed repair kit (HP LaserJet 9000)	FKITLJ9000 (feed repair kit)
Fuser assembly (HP LaserJet 9000 series)	RG5-5751-000 (fuser)
Transfer roller	RF5-3319-000 (transfer roller)
Paper feed / separation roller (tray 2 & 3) 4x used	RF5-3338-000 (roller)
Paper pickup roller (tray 1)	RF5-3403-000 (roller)
Paper separation roller (tray 1) 2x used	RF5-3404-000 (roller)
Paper pickup roller (tray 2 & 3) 2x used	RF5-3340-000 (roller)
Torque limiter (tray 2 & 3)	RB2-5759-000 (paper path)
Registration roller assembly	C8519-69012 (paper path)
Paper pickup assembly	RG5-5681-000 (paper path)
(£ email) Low voltage power supply	C8519-69008 (psu)
High voltage power supply board	RG5-5728-000 (psu)
Formatter board (main logic PCA)	C8519-67901 (pcb)
Laser scanner assembly	RG5-5826-000 (scanner)
Power supply fan	RH7-5294-000 (fan)
Controller board fan	RH7-5295-000 (fan)
Rear delivery fan	RH7-5296-000 (fan)
Front delivery fan	RH7-5297-000 (fan)
Control panel (includes display)	RG5-5703-000 (pcb)
Sensor flag (bin full sensor flag)	RB2-6035-000 (mechanical)
Sensor flag (fuser delivery flag)	RB2-6036-000 (mechanical)
Sensor flag (delivery sensor flag)	RB2-6037-000 (mechanical)
Fuser delivery drive assembly	RG5-5659-000 (mechanical)
HP LaserJet II/III series	
(£ email) Paper feed repair kit (HP LaserJet II / III)	FKITLJ3 (feed repair kit)
(£ email) Fuser assembly (HP LaserJet II / III series)	RG1-0940-450 (fuser)
Heat roller	RA1-3968-000 (fuser spare)
Fuser cleaning wand	RG1-0966-030 (fuser spare)
Gear (14 teeth) drives 20 tooth wide gear	RS1-0132-000 (fuser spare)
Main paper pickup roller	RA1-3851-000 (roller)
Paper separation pad	RF1-1145-000 (pad)
Upper heat extract fan (new style)	RH7-1122-000 (fan)
Ozone filter	RF1-2130-000 (filter)
HP LaserJet IIISi/4Si series	
(£ email) Maintenance kit (HP LaserJet IIISi / HP LaserJet 4Si)	MKIT4Si (maintenance kit)
Paper feed repair kit (HP LaserJet IIISi, 4Si, MX)	FKITLJ4Si (feed repair kit)
(£ email) Fuser assembly (HP LaserJet IIISi / HP LaserJet 4Si series)	RG5-0047-000 (fuser)
Transfer roller assembly	RG5-0141-000 (transfer roller)
Main paper pickup / separation roller (blue core)	RF5-0041-000 (roller)
HP LaserJet IIP/IIIP series	
(£ email) Paper feed repair kit (HP LaserJet IIP/ IIP+/ IIIP)	FKITLJ3P (feed repair kit)
(£ email) Fuser assembly (HP LaserJet IIP / IIIP series)	RG1-1789-220 (fuser)
Heat lamp (220v)	RF1-3304-000 (fuser spare)
Paper pickup tyre (2x off required)	RA1-7573-060 (roller)
Paper separation pad	RG1-1912-000 (pad)
Delivery roller assembly	RG1-1791-070 (paper path)
Scanner motor PCB	RG1-1771-030 (pcb)
Drum drive gear assembly	RG1-1777-000 (gear)
Nylon gear 27T/21T (idle gear drives heat roller gear)	RS1-0287-000 (gear)
HP Colour LaserJet 1500/2500 series	
Paper feed repair kit (HP Colour LaserJet 2500 series)	FKITLJ2500 (feed repair kit)
Fuser assembly (HP Colour LaserJet 1500 / 2500 series)	RG5-6913-000 (fuser)
Fuser assembly (HP Colour LaserJet 2550 series)	RG5-7573-000 (fuser)
Transfer roller assembly	RF5-4040-000 (transfer roller)
Transfer roller assembly (HP Colour LaserJet 2500 series)	RG5-6952-000 (transfer roller)
Transfer roller assembly (HP Colour LaserJet 2550 series)	RF5-4067-000 (transfer roller)
Face down, upper roller	RB2-9908-000 (roller)

Description**Part No**

Paper pickup roller	RB3-0160-000 (roller)
Guide roller	RB2-2892-000 (roller)
Paper feed separation pad assembly	RF5-4012-000 (pad)
Paper feed separation pad assembly (tray 2)	RB2-9960-000 (pad)
Paper pickup roller assembly	RG5-6952-000 (paper path)
Fuser film (HP LaserJet 2200/2500/4200)	FILM-2200 (film)
Electromagnetic clutch assembly	RH7-5366-000 (clutch)
Upper top bin output roller assembly	RG5-6897-000 (paper path)
Lower top bin output roller assembly	RG5-6936-000 (paper path)
Registration roller assembly	RG5-6939-000 (paper path)
(£ email) Top cover rack arm	RB3-0089-000 (mechanical)
(£ email) Sensor flag roller	RB2-7195-000 (mechanical)
Cooling fan	RH7-1537-000 (fan)
Laser scanner assembly	RG5-6880-000 (scanner)
(£ email) Rotary motor assembly	RG5-6958-000 (motor)
Main motor (HP Colour LaserJet 2500 series)	RF5-4010-000 (motor)
Main motor (HP Colour LaserJet 2550 series)	RF5-4063-000 (motor)
HP Colour LaserJet 3500/3700 series	
(£ email) Paper feed repair kit (HP LaserJet 3500)	FKITLJ3500 (feed repair kit)
(£ email) Paper feed repair kit (HP LaserJet 3700)	FKITLJ3700 (feed repair kit)
Fuser assembly (HP Colour LaserJet 3500 / 3700 series)	RM1-0430-000 (fuser)
Transfer roller assembly	RM1-0740-000 (transfer roller)
Paper pickup roller	RC1-1535-000 (roller)
Cassette paper pickup assembly	RM1-0731-000 (paper path)
Sub roller assembly	RM1-0709-000 (paper path)
Paper separation pad	RC1-0954-000 (pad)
High Voltage PSU	RM1-0505-000 (psu)
Formatter PCB (CLJ3500)	Q1319-67902 (pcb)
Formatter PCB (CLJ3700)	Q1321-67924 (pcb)
Laser scanner assembly	RM1-1480-000 (scanner)
HP Colour LaserJet 4500/4550 series	
Paper feed repair kit (HP Colour LaserJet 4500, 4500N, 4550, 4550N)	FKITLJ4500 (feed repair kit)
Paper feed repair kit (HP Colour LaserJet 4500DN, 4550DN)	FKITLJ4500D (feed repair kit)
Fuser kit (HP Colour LaserJet 4500 / 4550 series)	R96-5008 (fuser kit)
Upper fuser roller	RB2-0501-000 (fuser spare)
Lower fuser roller	RB2-0502-000 (fuser spare)
Transfer roller assembly (foam roller)	RF5-2112-000 (transfer roller)
Paper pickup roller (tray 1)	RB2-0717-000 (roller)
Paper pickup roller (tray 2 - D-shaped, 4x off required)	RB1-8865-000 (roller)
Paper pickup roller (tray 2)	RF5-2092-000 (roller)
Paper separation roller (tray 2 and 3 - blue core)	RF5-1885-000 (roller)
Paper feed separation pad (tray 1)	RB2-0734-000 (pad)
Tyre shaft (pickup tyre shaft)	RB2-0545-000 (paper path)
Torque limiter	RB1-8974-000 (clutch)
Formatter PCB (CLJ4500)	C4084-67905 (pcb)
(£ email) Formatter PCB (CLJ4550)	C4227-60001 (pcb)
Laser scanner assembly	RG5-5175-000 (scanner)
HP Colour LaserJet 4600 series	
Paper feed repair kit (HP Colour LaserJet 4600)	FKITLJ4600 (feed repair kit)
(£ email) Paper feed repair kit (HP Colour LaserJet 4600T)	FKITLJ4600T (feed repair kit)
Paper pickup assembly	RG5-6468-000 (paper path)
Paper pickup roller (tray 1) MP tray	RG9-1529-000 (roller)
Paper pickup roller (two required)	RF5-3739-000 (roller)
Separation pad (tray 1) MP tray	RF5-3750-000 (pad)
Laser scanner assembly (CLJ4600)	RG5-6390-000 (scanner)
(£ email) Laser scanner assembly (CLJ4650)	RG5-7475-000 (scanner)
DC controller PCB (CLJ4600)	RG5-6391-000 (pcb)
(£ email) DC controller PCB (CLJ4650)	RG5-7470-000 (pcb)
Low Voltage PSU (CLJ4600/4650)	RF5-6411-000 (psu)
High Voltage PCA power supply (CLJ4600/4650)	RG5-6395-000 (psu)

Description**Part No**

(£ email) Formatter PCB (CLJ4650)

Q3999-67902 (pcb)

HP Colour LaserJet 5500 series

Paper feed repair kit (HP Colour LaserJet 5500)

FKITLJ5500 (feed repair kit)

Paper separation pad (tray 1) MP tray

RF5-3865-000 (pad)

Paper pickup roller (tray 1) MP tray

RG9-1529-000 (roller)

Paper pickup roller

RF5-3340-000 (roller)

Paper feed / separation roller (tray 2)

RF5-3338-000 (roller)

Paper pickup assembly (tray 2)

RG5-6670-000 (paper path)

Paper pickup assembly (tray 3/4)

RG5-6748-000 (paper path)

Paper pickup drive assembly

RG5-6661-070 (paper path)

HP Colour LaserJet 8500/8550 series

Paper feed repair kit (HP Colour LaserJet 8500, 8500N, 8500DN, 8550, 8550N, 8550DN)

FKITLJ8500 (feed repair kit)

Paper pickup roller (tray 1)

RB1-9526-000 (roller)

Paper pickup roller (tray 2, 3 and 4 - 2x off required per tray)

RF5-1834-000 (roller)

Paper separation roller (tray 2, 3 and 4 - 1x off required per tray)

RF5-1835-000 (roller)

Separation pad (tray 1)

RF5-1989-000 (pad)

HP Colour LaserJet 9500 series

(£ email) Paper feed repair kit

FKITLJ9500 (feed repair kit)

Transfer roller assembly

RG5-6178-000 (transfer roller)

Secondary transfer roller assembly

RG5-6179-000 (transfer roller)

Separation pad (tray 1) MP tray

RF5-3490-000 (pad)

Paper pickup roller (tray 1) MP tray

RB2-1820-000 (roller)

Multi Purpose tray guide pad

RF5-3489-000 (pad)

Pickup roller

RF5-3340-000 (roller)

Paper feed / separation roller (2000 sheet tray) 3x required)

RF5-3338-000 (roller)

Torque limiter clutch

RB2-5759-000 (clutch)

Manual feed pickup assembly

RG5-6090-000 (paper path)

Vertical registration assembly

RG5-6225-000 (paper path)

Paper registration roller assembly

RG5-6016-000 (paper path)